



 
# DESCRIPTION

## OZONE GENERATOR

Type: FM-A200  
Voltage: AC220~240V  
Power: 10W  
Pump Output: 2~3L/min  
Ozone Output: 200mg/hr

**BEYOK  
OZONE**  
WWW.OOOZONE.COM


### Check the products and the accessories in the following pictures

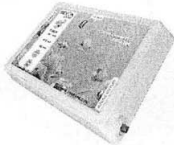


Ozone Generator



Silicon tube 1 pcs

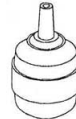


Air Stone 1 pcs

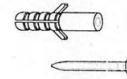


Expanding bolt four pcs

### Sketch map of the machine body

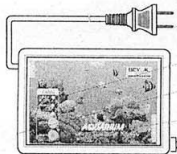

<b>Electrical input</b>	connect to electrical source
<b>Indicator light</b>	Show the working situation of the machine
<b>Time button</b>	Select working time between 6, 18 and 30min
<b>On-off button</b>	Show the working situation between on and off
<b>Ozone discharge outlet</b>	The exit of the ozone: penetrating in the air or the water


### The way of penetrating in the air

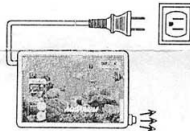

- Fix the machine on the wall or place it on the table (the height is better to be beyond the range that a general child can touch)
- Plug in
- Turn on the switch, let the machine work

Attention: *The ozone is penetrated into the water through the air discharge outlet*


### The way of penetrating in the water

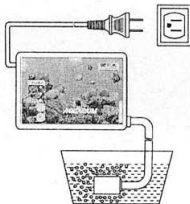

- Fix the machine on the wall or place it on the table (the height is better to be beyond the range that a general child can touch)
- Plug in
- One end of the silicon tube connect to the air stone, the other end connect to the ozone discharge outlet, and be sure the connection is firm
- Put the air-discharge areaceous spout into the water
- Turn on the switch, let the machine work

Attention: *The ozone is penetrated into the water through the air discharge areaceous spout*

### The fixing of the pothook

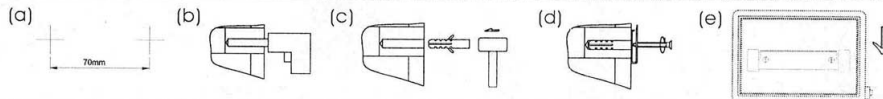

- Choose a place for fixing, make signs for drilling, the horizontal distance between the two holes is 7cm;
- Vertically make holes(3cm) in the wall with a drill( $\Phi 6$ );
- Strike the plastic shells of the expanding bolts into the drilled holes with a hammer;
- Put the bolts into the shells with a screwdriver, and fix the pothook;
- Put the OZONE GENERATOR to the pothook.

Attention: The fixing of the bolts is prepare for hanging the ozone generator, you can use it or not.

### Attention

- High voltage in the machine, don't tear down lest danger.
- If the machine is used in a small room, please keep away from it. 15 minutes later after turning off, it is permitted to enter.
- When using unit in the water, be sure the machine is placed over the level of water level.
- While operating, it is recommended to hang the appliance on the wall as shown in the illustration.
- Work less than 30 mins, and prohibit working more than 1 hour continuously. It is necessary to stop to cool at least 10 mins.
- Prohibit clashing violently, or will damage components inside.
- Operational environment: temperature: 10-30°C, humidity: lower than 70%RH, advice to use air dryer.